SPRING-ACTUATED BRAKES


Application Motors, articulated robots, actuators, machine tools, forkliffs, aerial vehicles, hoists, electric carts, electric shutters, medical equipment, wind turbine generators

Provides Excellent Performance in Emergency Braking When Power Goes Out and in Long-term Holding

These are electromagnetic brakes actuated by the force of springs when not energized. These standard brakes boast a variety of advantages, including quiet operation, long service life, slim form factors, high torque in a compact package, stable braking force, and the ability to release manually. We can create a custom designs for you based on these standard products.





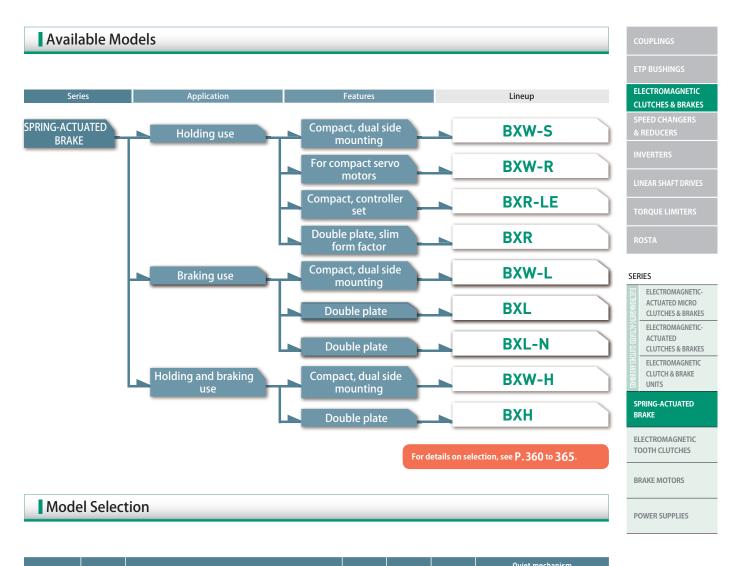

								Q	armature pull-in noisebraking noiseCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomizationCustomization	
Models/ Type	Mounting method		Release	Dust cover	Slim	Reduced aperiodic noise	armature	braking		
	0.1	01 0.1	1 10	100	1000					
BXW-L/H/S	Stator/ flange	0.12 ~ 9	5.20		Option	n Option	Customization	Std.	Customization	Customization
BXW-R	Stator	0.30 ~ 2.	50		_	—	Customization	Customization	Customization	Customization
BXR-LE	Stator	0.06 ~ 3.20			—	-	Std.	Customization	Customization	Customization
BXR	Stator		5~55	5	-	_	Std.	Customization	Customization	Customization
BXL	Stator		2~22		Option	n —	Customization	Option	Option	Std.
ВХН	Stator		4~44		Option	n —	Customization	Option	Customization	Customization
BXL-N	Stator		2 ~ 80		_	—	Customization	Option	Option	Std.

MODEL	S							
BXW								
BXR								
BXL					 	 		
вхн					 			
BXL-N								

Product Lineup

BXW-L/H/S

RoHS



Three types for various applications

The line-up includes three types: the S type for holding, the L type for braking, and the H type for both holding and braking.

2-way mounting


The stator (a heat source) can be mounted facing either inwards or outwards.

Brake type		BXW- □ - □ L	BXW- □ - □ H	BXW- □ - □ S
Brake torque	[N·m]	$0.12\sim\!2.00$	$0.24 \sim 4.00$	$0.36\sim 5.20$
Operating temperature	[°C]	$-10 \sim +40$	$-10\sim+40$	$-10 \sim +40$
Backlash		Extremely small size	Extremely small size	Extremely small size



Structure

Has release lever

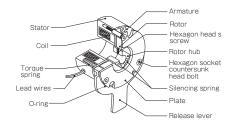

 (H_{1})

Low inertia

BXW-R



Dedicated design for small servo motors

These have dedicated designs matched for specifications and dimensions for \Box 40, \Box 60, and
80 small servo motors.


Low-inertia rotor

We succeeded in dramatically reducing both mass and drag wear while ensuring adequate strength.

Brake torque	[N·m]	$0.30 \sim 2.50$
Operating		10 1 10
temperature	[°C]	$-10 \sim +40$
Backlash		Extremely small size

Structure

Dedicated for holding High torque



BXR-LE

BXR


90

Ultra compact

Use with a built-in dedicated controller provides a range of benefits, including an ultra-thin profile, reduced energy consumption, lower heat emissions, higher torgue and a longer service life.

-	-	
Brake torque	[N·m]	$0.06 \sim 3.20$
Operating temperature	[°C]	$-10 \sim +40$
Backlash		Extremely small size

Low





Structure

This ultra-slim design is two-thirds the thickness of our previous design.

Low-inertia rotor


Ultra-slim

We succeeded in dramatically reducing both mass and drag wear while ensuring adequate strength.

Extremely small backlash

The backlash of the spline hub type is 0.2° to 0.5°.


Brake torque	[N·m]	5~55
Operating temperature	[°C]	$-10 \sim +40$
Backlash		Extremely small size





Dedicated Ultra-slim

Structure



BXL





Low noise

These reduce annoying high-frequency friction noise during braking. Products that reduce aperiodic noise or armature pull-in noise are also available.

Stable braking

With low torque fluctuation, these brake loads instantly even when malfunctions occur.

Brake torque	[N·m]	$2 \sim 22$
Operating temperature	[℃]	$-10 \sim +40$
Backlash		Extremely small size

Structure

Structure


Stator

Coil

Stud bolt

Torque spring

Lead wires



ELECTROMAGNETIC **CLUTCHES & BRAKES**

SERIES



TOOTH CLUTCHES

BRAKE MOTORS

Armature Auxiliary spring

lexagonal nut

Rotor

Plate

Rotor hub

POWER SUPPLIES

BXH

Polic



For both holding and braking

These brakes ensure sufficient torque for holding applications while also being usable as emergency brakes.


High torque

Provide twice the torque with the same dimensions as BXL models.

Brake torque	[N·m]	4~44
Operating temperature	[℃]	$-10 \sim +40$
Backlash		Extremely small size



Structure



MODELS BXW BXR BXL вхн BXL-N

BXL-N



Low noise

These reduce annoying high-frequency friction noise during braking. Products that reduce aperiodic noise or armature pull-in noise are also available.

Variety of torques

Two to three different kinds of braking torque for the same outer diameter are available to permit the most suitable design for the application at hand.

Brake torque	[N·m]	$2 \sim 80$
Operating temperature	[°C]	$0 \sim +40$
Backlash		Extremely small size



Customization Examples

BXW Large Type



This is a large version of the BXW with static friction torque of 300 N-m.

Backlash is kept extremely small by locking the rotor hub to the rotor via a disc spring.

I Types with Integrated Flanges

Integrated coupling-rotor hub type




Even more compact devices can be designed by fitting the slim and compact BXR model spline rotor hub into a metal plate-spring-type coupling exterior.



Mounting flanges and brake stators can be integrated. This helps reduce the number of components and saves space.

Special Release Levers

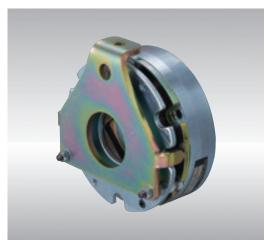


Release levers can also be designed for specific units to match the device construction.

Web code

Contact Miki Pulley from our website for details.

For inquiries on customization



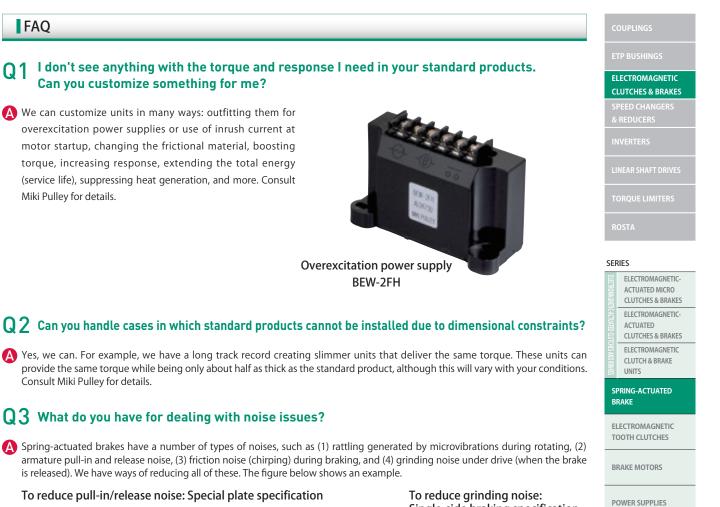




FAQ

Miki Pulley for details.

Consult Miki Pulley for details.

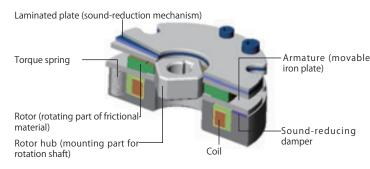

Single-side braking specification



MODELS	
BXW	
BXR	

BXL вхн BXL-N

BXW Models

Specifications

■ BXW- □ - □ L (Braking use)

		Static friction torque Ts [N·m]	Coil (at 20°C) Voltage Wattage Current Resistant [V] [W] [A] [Ω]				res	Max.	Rotating part	Allowable braking	Total braking			Mass
Model	Size		Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	Heat listance class	rotation speed [min ⁻¹]	moment of inertia J [kg·m²]	energy rate Pba ℓ [W]	energy ET[J]	pull-in time ta [s]	release time tar [s]	[kg]
			12	5.0	0.417	28.8	F							
			24	5.0	0.208	115	F							
BXW-01-10L	01	0.12	45	5.0	0.111	405	F	5000	0.6×10^{-6}	2.5	1.5 × 10 ⁶	0.008	0.015	0.2
			90	5.0	0.056	1622	F							
			180	5.0	0.028	6486	F							
		2 0.25	12	6.6	0.550	21.8	F							
BXW-02-10L			24	6.6	0.275	87.3	F	5000			3.0 × 10 ⁶	0.008	0.015	0.3
BXW-02-12L	02		45	6.6	0.147	307	F		1.9 × 10 ⁻⁶	5.0				
			90	6.6	0.073	1228	F							
			180 12	6.6 9.0	0.037	4912 16.0	F							
			24	9.0 9.0	0.750	16.0 64.0	F							
BXW-03-10L	03	0.50	24 45	9.0 8.2	0.373	247	F	5000	3.8 × 10 ⁻⁶	10.0	4.5×10^{6}	0.025	0.025	0.4
BXW-03-12L	05	0.50	45 90	8.2 8.2	0.182	247 988	F	5000	5.0 × 10	10.0	4.5 × 10-	0.025	0.025	0.4
			180	8.2	0.046	3954	F							
			12	11.5	0.958	12.5	F							
			24	11.5	0.479	50.1	F							
BXW-04-10L	04	1.00	45	10.0	0.222	203	F	5000	12.0×10^{-6}	20.0	7.0×10^{6}	0.030	0.030	0.6
BXW-04-12L	•.		90	10.0	0.111	810	F	5000	1210	2010	710 - 10	01050	0.050	0.0
			180	10.0	0.056	3241	F							
			12	13.0	1.083	11.1	F							
			24	13.0	0.542	44.3	F							
BXW-05-10L	05	2.00	45	13.0	0.289	156	F	5000	23.0 × 10 ⁻⁶	30.0	12.0×10^{6}	0.035	0.035	0.8
BXW-05-12L			90	13.0	0.144	623	F							
			180	13.0	0.072	2492	F							


BXW- \square - \square H (Holding and braking use)

		Static friction		Coil (at	: 20°C)		res	Max.	Rotating part	Allowable braking	Total braking	Armature	Armature	Mass
Model	Size	torque Ts [N∙m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	Heat istance class	Max. rotation speed [min ⁻¹]	moment of inertia J [kg·m²]	energy rate Pba £ [W]	energy ET[J]	pull-in time ta [s]	release time tar [s]	[kg]
			12	5.0	0.417	28.8	F							
			24	5.0	0.208	115	F							
BXW-01-10H	01	0.24	45	5.0	0.111	405	F	5000	$0.6 imes 10^{-6}$	0.5	0.2×10^{6}	0.010	0.010	0.2
			90	5.0	0.056	1622	F							
			180	5.0	0.028	6486	F							
BXW-02-10H			12	6.6	0.550	21.8	F							
			24	6.6	0.275	87.3	F							
BXW-02-10H	02	0.50	45	6.6	0.147	307	F	5000	1.9×10^{-6}	1.0	0.3×10^{6}	0.010	0.010	0.3
			90	6.6	0.073	1228	F							
			180	6.6	0.037	4912	F							
			12	9.0	0.750	16.0	F							
BXW-03-10H			24	9.0	0.375	64.0	F	5000						0.4
BXW-03-12H	03	1.00	45	8.2	0.182	247	F		3.8 × 10 ⁻⁶	2.0	0.5 × 10 ⁶	0.035	0.020	
			90	8.2	0.091	988	F							
			180 12	8.2 11.5	0.046	3954 12.5	F							
			24	11.5	0.958	50.1	F							
BXW-04-10H	04	2.00	24 45	10.0	0.479	203	F	5000	12.0 × 10 ⁻⁶	4.0	1.0 × 10 ⁶	0.040	0.025	0.6
BXW-04-12H	04	2.00	45 90	10.0	0.222	810	F	5000	12.0 × 10 -	4.0	1.0 × 10-	0.040	0.025	0.0
			180	10.0	0.056	3241	F							
			12	13.0	1.083	11.1	F							
			24	13.0	0.542	44.3	F							
BXW-05-10H	05	4.00	45	13.0	0.289	156	F	5000	23.0 × 10 ⁻⁶	6.0	2.0×10^{6}	0.045	0.030	0.8
BXW-05-12H			90	13.0	0.144	623	F	5000		0.0	2.0	010 15	0.000	0.0
			180	13.0	0.072	2492	F							
			. 50	. 510			-							

■ BXW- □ - □ S (Holding use)

		Static friction		Coil (at	: 20°C)		res	Max.	Rotating part	Allowable braking	Total braking	Armature	Armature	Maria
Model	Size	torque Ts [N∙m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	Heat istance class	rotation speed [min ⁻¹]	moment of inertia J [kg·m²]	energy rate Рьа е [W]	energy ET[J]	pull-in time ta [s]	release time tar [s]	Mass [kg]
BXW-01-10S	01	0.36	24	5.0	0.208	115	F	5000	$0.6 imes 10^{-6}$	-	-	0.025	0.010	0.2
BXW-02-10S BXW-02-12S	02	0.75	24	6.6	0.275	87.3	F	5000	1.9 × 10 ⁻⁶	-	-	0.030	0.010	0.3
BXW-03-10S BXW-03-12S	03	1.50	24	9.0	0.375	64.0	F	5000	3.8 × 10 ⁻⁶	-	-	0.035	0.020	0.4
BXW-04-10S BXW-04-12S	04	2.60	24	11.5	0.479	50.1	F	5000	12.0 × 10 ⁻⁶	-	-	0.040	0.025	0.6
BXW-05-10S BXW-05-12S	05	5.20	24	13.0	0.542	44.3	F	5000	23.0 × 10 ⁻⁶	-	-	0.045	0.030	0.8

 * The armature pull-in time and armature release time are taken during DC switching.

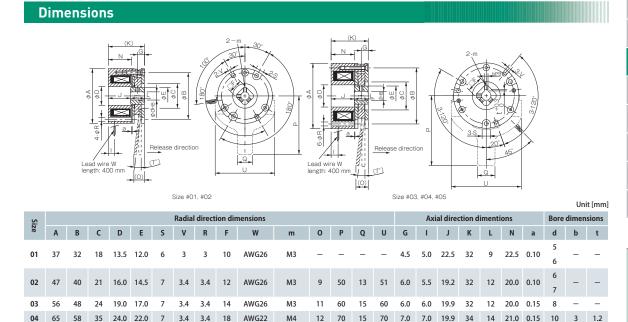

28.0 26.5 36 * There is no release lever option for size #01

How to Place an

Order

24.0 22.0

7 3.4 3.4

9 4.5 4.5

04 65 58 35

05 75 66

BXW-01-10L-24V-5

AWG22

AWG22

M4

M4

80 20 80 7.0

14



22

Bore diameter (dimensional symbol d) Voltage (Specifications table)

7.0 19.9

7.0

21.0 0.15

21.5 0.15

Shape No.

01

02

03

04

05

06

а b с

х ×

х

х ×

×

0 0 ×

X

× ×

14

10

12

4 1.5

Application L: Braking-use H: Holding- and braking-use

22.1 36

S: Holding use

* Models equipped with the release lever and models with 12-V and 180-V voltage specifications are made to order. * Contact Miki Pulley for assistance with bore diameters, d, not listed in the Dimensions tales and voltages not listed in the Specifications table.

Options: Dust Cover

Dust covers are available as options. These enable use in challenging environments by keeping out foreign matter.

Dust covers come in two types: full covers that have no hole for the shaft, and shaft-hole covers, which can be used on brakes mounted with the shaft passing through. You can also choose the locations of the lead exit holes for brakes mounted on plates or mounted on stators.



How to Place an Order

BXW-01-C02	2
Brake size 01, 02, 03, 04, 05	
Shape no 01, 02, 03, 04, 05, 06	

Specifications							
Material	Ethylene propylene diene monomer (EPDM) rubber						
Temperature range	-40°C to 140°C						
Exterior color	Black						
Applicable brake models	L type, H type, S type BXW models						
Applicable brake sizes	#01, #02, #03, #04, #05						
Applicable specification voltages	12 V DC, 24 V DC, 45 V DC, 90 V DC, 180 V DC						

* This temperature range is for dust cover materials. The operating temperature for BXW models is -10°C to 40°C.

Cannot be mounted on BXW models with release levers or R-type BXW models.

Dimensions

			Unit [mm]
Model	φ Α	В	<i>ф</i> d
BXW-01-C	41	33	16
BXW-02-C 🗌	51	33	21
BXW-03-C 🗌	60	33.5	24
BXW-04-C 🗌	69	35.5	30
BXW-05-C 🗌	79	37.5	30

* Symbol a indicates a hole made for brakes with shafts passing through; symbol b indicates a hole made for lead exit when mounted on a plate; symbol c indicates a hole made for lead exit when mounted on a stator. * Shapes #01 and #04 require that a hole be made separately for leads to exit.

COUPLINGS	
ETP BUSHINGS	
ELECTROMAGNETIC	
CLUTCHES & BRAKES	
SPEED CHANGERS	
& REDUCERS	
INVERTERS	
LINEAR SHAFT DRIVES	
TORQUE LIMITERS	
ROSTA	

SERIES



BRAKE MOTORS

MODELS	
BXW	
BXR	
BXL	
ВХН	
BXL-N	

BXW Models


Specifications (BXW- 🗆 - 🗆 R)

(For servo motors)

		Static		Coil (a	t 20℃)		res	Max.	Rotating part	Allowable	Total	Armature	Armature	
Model	Size	friction torque Ts [N·m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	Heat sistance class	rotation speed [min ⁻¹]	moment of inertia J [kg∙m²]	braking energy rate Eba ℓ [J]	braking energy ET [J]	pull-in time ta [s]	release time tar [s]	Mass [kg]
BXW-01-10R	01	0.3	24	6.1	0.254	94.4	F	6000	$1.36 imes 10^{-7}$	15	3000	0.035	0.020	0.1
BXW-03-10R	03	1.3	24	7.2	0.300	80.0	F	6000	1.17×10^{-6}	87	17000	0.050	0.020	0.3
BXW-05-10R	05	2.5	24	8.0	0.333	72.0	F	6000	$3.68 imes 10^{-6}$	200	40000	0.060	0.020	0.5

 * The armature pull-in time and armature release time are taken during DC switching.

Dimensions

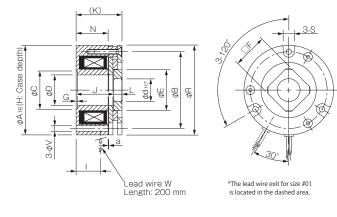

Size	Radial direction dimensions									Axial direction dimentions						Bore dimensions				
ze	А	В	с	D	E	S	V	R	F	w	G	Н	1	J	К	L	Ν	а	d	d max
01	33	26.5	16	9	14	7	3.4	32.5	12	AWG26	0.2	4	19	26	30	4	22.8	0.1	8.5	8.5
03	48	42	26	14	23	8	3.4	47.5	19	AWG22	0.2	4	18	26	30	4	22.6	0.1	11	15
05	64	56	28	22	31	8	4.5	63.5	25	AWG22	0.2	4	16	25.5	30	4.5	21.3	0.1	16	20

* Bore diameters other than the standard bore diameters given above are also possible. d max indicates the maximum bore diameter with a round shaft.

* In addition to round bores, key processing can also be handled. Consult Miki Pulley for details. * Dimensions, mounting and the like are not interchangeable with other BXW models.

How to Place an Order

BXW-01-10R-24V-8.5

Size _____ Release lever ____ 10: Not included

Bore diameter (dimensional symbol d) Voltage (Specifications table) Application R: Servo motor-use

*Contact Miki Pulley for assistance with bore diameters, d, not listed in the Dimensions tales and voltages not listed in the Specifications table.

Web code

C017

Unit [mm]

ELECTROMAGNETIC

CLUTCHES & BRAKES

Items Checked for Design Purposes

Precautions for Handling

Brakes

Most electromagnetic braking systems are made using flexible materials. Be careful when handling such parts and materials as striking or dropping them or applying excessive force could cause them to become damaged or deformed.

Lead Wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles, or allow them to hang too low.

Frictional Surface

Since these are dry brakes, they must be used with the frictional surface dry. Keep water and oil off of the frictional surfaces when handling the brakes.

Precautions for Use

Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust, and other particles that could affect the braking system.

Operating Temperature

The operating temperature range is -10° C to 40° C. If you will use the product at other temperatures, consult Miki Pulley.

Power Supplies

BXW models use commercial AC 100 V or 200 V single phase, full-wave rectified or half-wave rectified. Select as appropriate for your application. See the table below, "Recommended power supplies and circuit protectors," for the power supply devices we recommend.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme changes in power supply voltage. Make sure to keep power supply voltage to within \pm 10% of the rated voltage value.

Air Gap Adjustment

BXW models do not require air gap adjustment. The brake air gap is adjusted when the braking system is shipped from the factory.

Circuit Protectors

If using a power supply that is not equipped with a circuit protector for DC switching, make sure to connect the recommended circuit protector device in parallel with the brake.

Recommended Power Supplies and Circuit Protectors

Recommended power supplies

Input AC power	Brake voltage	Rectification method	Recommended power supply model		
AC100V 50/60Hz	DC24V	Single-phase, full-wave	BES-20-71-1		
AC100V 50/60Hz	DC45V	Single-phase, half-wave	BEW-1R		
AC100V 50/60Hz	DC90V	Single-phase, full-wave	BEW-1R		
AC200V 50/60Hz	DC24V	Single-phase, full-wave	BES-20-71		
AC200V 50/60Hz	DC90V	Single-phase, half-wave	BEW-2R		
AC200V 50/60Hz	DC180V	Single-phase, full-wave	BEW-2R		
AC400V 50/60Hz	DC180V	Single-phase, half-wave	BEW-4R		

* A DC power supply such as a battery can also be used to supply the 24 V DC required for the brake voltage

Recommended circuit protectors

Input voltage	Brake voltage	Rectification method	Recommended circuit protector (varistor)
DC24V	DC24V	-	NVD07SCD082 or an equivalent
AC100V 50/60Hz	DC45V	Single-phase, half-wave	NVD07SCD220 or an equivalent
AC100V 50/60Hz	DC90V	Single-phase, full-wave	NVD07SCD220 or an equivalent
AC200V 50/60Hz	DC90V	Single-phase, half-wave	NVD07SCD470 or an equivalent
AC200V 50/60Hz	DC180V	Single-phase, full-wave	NVD07SCD470 or an equivalent
AC400V 50/60Hz	DC180V	Circula mhasa	NVD14SCD820 or an equivalent

* NVD
SCD
parts are manufactured by KOA Corporation.

* DC24V indicates a product recommended with a stepdown transformer or the like

* BXW models do not come with circuit protectors.

Precautions for Mounting Mounting Orientation

BXW models can be mounted with the stator facing inwards (stator mounted) or outwards (plate mounted). Select your mounting orientation as the application dictates. Be aware, however, that the BXW-R type is only compatible with stator centering-mark mounting. Your understanding is appreciated.

Affixing the Rotor Hub

Affix the rotor hub to the shaft with hex-socket-head set screws such that the rotor hub does not touch the armature or stator. If you are applying adhesive to the hex-socket-head set screws, be careful that the adhesive does not come out onto the rotor hub surface. Note also that since the BXW-R type is constructed so that the rotor hub does not go through the stator, affix it by press-fitting it onto the shaft at a position that does not touch the armature (see dimension J) when . they are assembled.

Bolts and Screws

Implement screw-locking measures such as use of an adhesive threadlocking compound to bolts and screws used to install brakes.

Shafts

The shaft tolerance should be h7 class (JIS B 0401). Note that the harder the material used in the shaft, the less effective the hexagonsocket set screw will be. Note also that for the BXW-R type, the shaft is press fitted into the rotor hub. The shaft tolerance should be determined based on the press-fit tolerance.

Accuracy of Brake Attachment Surfaces

Make sure that concentricity (X) and perpendicularity (Y) do not exceed the allowable values of the table below.

Allowable concentricity and perpendicularity values for the BXW

Size	Concentricity (X)	Perpendicularity (Y)
5120	T.I.R. [mm]	T.I.R. [mm]
01	0.05	0.02
02	0.05	0.02
03	0.10	0.02
04	0.10	0.02
05	0.10	0.02

Stator mounted



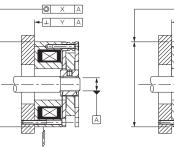


Plate mounted

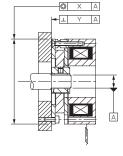



OX A

А

ΗI

MODELS	
BXW	
BXR	
BXL	
ВХН	
BXL-N	



SPRING-ACTUATED BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES


BRAKE MOTORS


BXR-LE Models For holding

Specifications (Brake unit)

	Static Overevcitation output				Coil (at	: 20°C)							Allowable					
Model	Size	Static	Ove	rexcita	tion ou	tput	Norm	al excit	ation o		Heat resistance	Max. rotation	Rotating part moment of	braking	Total braking	Armature pull-in time	Armature release time	
Model	ze	torque T₅ [N∙m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	class	speed [min ⁻¹]	inertia J [kg∙m²]	energy rate Ebal [J]	energy ET [J]	(24 V DC) ta [s]	(7 V DC) tar [s]	[kg]
BXR-015-10LE	015	0.06	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	$3.34 imes 10^{-8}$	5	1000	0.020	0.020	0.03
BXR-020-10LE	020	0.14	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	5.56 × 10 ⁻⁸	15	3000	0.035	0.020	0.06
BXR-025-10LE	025	0.32	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	1.56 × 10 ⁻⁷	15	3000	0.035	0.020	0.08
BXR-035-10LE	035	0.62	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	4.83 × 10 ⁻⁷	87	17000	0.050	0.020	0.12
BXR-040-10LE	040	1.32	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	6.32 × 10 ⁻⁷	87	17000	0.060	0.020	0.16
BXR-050-10LE	050	3.20	24	16.5	0.688	35	7	1.4	0.200	35	F	6000	1.51 × 10 ⁻⁶	200	40000	0.060	0.020	0.40

Dimensions (Brake unit)

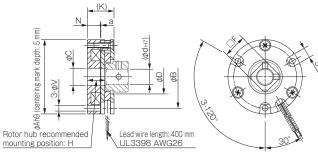



The rotor hub used to couple the shaft and rotor can either be provided by the customer based on the above diagram or selected from the optional products on the right-hand page. Rotor hubs can also be recommended or fabricated to the desired shape. Consult Mile Juley for details


Unit [mm]

																Unit [mm]
Model	Size			Ra	dial dire	ection din	nensions	[mm]			Axial direc	tion diment	tions [mm]	Rotor hub m	achining dim	ensions [mm]
Model	ze	φΑ	φΒ	φC	φD	φ d max.	□ F	S	φV	н	К	Ν	а	L	φ D2	🗆 F2
BXR-015-10LE	015	26	22	7	12	5	8	4.3	2.3	$9.5 \sim 10.0$	14.0	7.0	0.1	4 or more	10 _{-0.1}	8 _ 0 _ 0.07
BXR-020-10LE	020	32	28	9	16	8	12	5.0	2.3	$9.5 \sim 10.0$	14.0	7.0	0.1	4 or more	14 _{-0.1}	12_0.07
BXR-025-10LE	025	39	33	9	18	8	12	5.5	3.0	$9.5 \sim 10.0$	14.0	7.0	0.1	4 or more	$14_{-0.1}^{0}$	$12_{-0.07}^{0}$
BXR-035-10LE	035	48	42	15	28	14	19	5.5	3.0	$9.5 \sim 10.0$	14.0	7.0	0.1	4 or more	23 _{-0.1}	19_0 0.07
BXR-040-10LE	040	56	50	15	27	14	19	6.5	3.4	$9.9 \sim 10.4$	14.5	7.4	0.1	4 or more	23 _{-0.1}	$19_{-0.07}^{0}$
BXR-050-10LE	050	71	65	22	37	20	25	8.0	4.4	14.0 ~ 14.4	19.0	10.5	0.1	4.5 or more	31_0.1	25_0_0


Specifications (Controller)

Mo	del	BEM-24ESN7-12	20N							
Input v	oltage	24V DC \pm 10% smoothing	power supp	oly						
Output	voltage	Initial: 24 V DC (0.2 sec.) Constant: 7 V * When the input voltage is 21 V DC, the								
Max. outp	ut current	1.0 A DC (ambient temp.: 20 $^\circ$ C), 0.8 A I	OC (ambient t	emp.: 60°C)						
Time	rating	Continuous								
Insulating	resistance	500 V DC, 100 M Ω with Megger (input/output	- between term	ninal and case)						
Dielectric stre	ngth voltage	1000 V AC, 50/60 Hz, 1 min. (input/output -	between term	inal and case)						
Ambient er	vironment	-20 to 60°C, 5 to 95% RH, no co	ndensation/	freezing						
Ma	ISS	0.02kg	0.02kg							
Lead wire	Function	Description	Specifi	cation						
Red	Input (+)	Connects the 24 V DC smoothing power supply (+)	UL3398	AWG26						
Black	Input (-)	Connects the 24 V DC smoothing power supply (-)	UL3398	AWG26						
Yellow	Output	Connects the spring-actuated brake (either pole) UL3398 AWG								
Yellow	Output	Connects the spring-actuated brake (either pole) UL3398 AWG26								


Structure (Controller)



Dimensions (Controller)

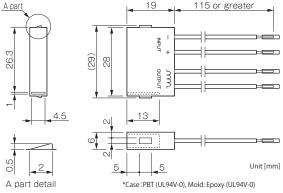

Timing Chart (Controller)




Web code

C017

Option (Rotor Hub)


Set screw type (C)



Model	Size	L	D2	□ F2	m		d[mm]	
Model	JIZE	[mm]	[mm]	[mm]	Nominal dia.	Standard	Min.	Max.
BXR-015-10LE	015	10	10	$8_{-0.07}^{0}$	M2.5	5	4	5
BXR-020-10LE	020	10	14	$12_{-0.07}^{0}$	M3	8	5	8
BXR-025-10LE	025	10	16	$12_{-0.07}^{0}$	M3	8	5	8
BXR-035-10LE	035	12	26	$19_{-0.07}^{0}$	M4	14	8	14
BXR-040-10LE	040	12	26	$19_{-0.07}^{0}$	M4	14	11	14
BXR-050-10LE	050	15	35	$25_{-0.07}^{0}$	M5	20	15	20

How to Place an

Order



Press fit type (P)

Model	Size	L	D2	□ F2		d[mm]	
woder	Size	[mm]	[mm]	[mm]	Standard	Min.	Max.
BXR-015-10LE	015	4	9.5	$8 {\ }^{0}_{-0.07}$	5	4	5
BXR-020-10LE	020	4	14	$12_{-0.07}^{0}$	8	5	8
BXR-025-10LE	025	4	14	$12_{-0.07}^{0}$	8	5	8
BXR-035-10LE	035	4	23	$19_{-0.07}^{0}$	14	8	14
BXR-040-10LE	040	4	23	$19_{-0.07}^{0}$	14	11	14
BXR-050-10LE	050	4.5	31	$25_{-0.07}^{0}$	20	15	20

Bore diameter (dimension symbol; d)

Option (Rotor Hub)

Blank: No rotor hub

C: Set screw type

P: Press fit type

ELECTROMAGNETIC CLUTCHES & BRAKES SPEED CHANGERS & REDUCERS INVERTERS LINEAR SHAFT DRIVES TORQUE LIMITERS ROSTA

SERIES



BRAKE MOTORS

POWER SUPPLIES

Items Checked for Design Purposes

Precautions for Handling

Brakes

Electromagnetic brakes use many soft materials. Care should be taken during handling as accidentally striking, dropping or applying excessive force to the brake could cause denting or deformation.

Lead wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles or allow them to hang too low.

Friction Surfaces

Since these are dry brakes, they must be used with the friction surfaces dry. Keep water and oil away from the friction surfaces when handling the brakes.

Precautions for Use

Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust or other particles that could affect the braking system.

Operating Temperature

The operating temperature range is -10° C to 40° C for brakes and -20° C to 60° C for dedicated controllers. If you will use the product at other temperatures, consult Miki Pulley.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme fluctuations in power supply voltage. Keep the power supply voltage to within \pm 10% of the rated voltage.

Air Gap Adjustment

BXR LE models do not require air gap adjustment. The brake air gap is adjusted at shipment from the factory.

Circuit Protectors

Circuit protectors should not be connected as they are built into the dedicated controllers.

Controller Operation

The control function is operated by the ON/OFF switch on the input side, so switching should be carried out by the input side of the dedicated controller.

Precautions for Mounting Affixing the Rotor Hub

In the design, the rotor hub section should be installed such that it does not touch the armature or stator. Also, with the normal installation method of using hexagon-socket set screws coated with adhesive, take care not to trap adhesive between the screws and the rotor hub surface.

Bolts and Screws

Implement screw-locking measures such as use of an adhesive thread locking compound to bolts and screws used to install brakes.

Shafts

BXR-015-10LE-006-C5

(3-digit number listed in the specifications tables)

Size

Controller set type


Nominal static friction torque -

The shaft tolerance should be h7 class (JIS B 0401). If using an optional press-fit type rotor hub, the shaft tolerance should be determined based on the press-fit tolerance.

Accuracy of Brake Attachment Surfaces

Make sure that the centering mark and shaft concentricity (X) and the shaft perpendicularity (Y) relative to the brake mounting surface do not exceed the allowable values in the table below.

l	Model	Size	Concentricity (X)	Perpendicularity (Y)
l	Model	5120	T.I.R. [mm]	T.I.R. [mm]
	BXR-015-10LE	015	0.05	0.02
	BXR-020-10LE	020	0.05	0.02
	BXR-025-10LE	025	0.05	0.02
	BXR-035-10LE	035	0.05	0.02
	BXR-040-10LE	040	0.10	0.02
	BXR-050-10LE	050	0.10	0.02

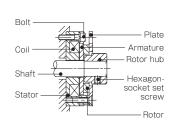

MODELS
BXW
BXR
BXL
BXL
BXH
BXL-N



OX A

 A


BXR Models Square Hub Type


Specifications (BXR- 🗌 -10)

		Static		Coil (at	: 20°C)		Heat	Max.	Rotating part	Allowable braking	Total	Armature	Armature		
Model	Size	friction torque Ts [N·m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	resistance class	rotation speed [min ⁻¹]	moment of inertia J [kg·m ²]	energy rate Ebal [J]	braking energy ET[J]	pull-in time ta [s]	release time tar [s]	Backlash [°]	Mass [kg]
BXR-06-10-005	06	5	24	17.6	0.73	32.7	F	5000	$2.35 imes 10^{-5}$	500	$2.0 imes10^{5}$	0.050	0.020	1.2	0.9
BXR-08-10-012	08	12	24	19.4	0.81	29.7	F	5000	$3.45 imes 10^{-5}$	800	$2.0 imes 10^5$	0.080	0.020	1.2	1.2
BXR-10-10-016	10	16	24	21.5	0.90	26.8	F	5000	1.12×10^{-4}	1500	$2.2 imes 10^6$	0.110	0.050	0.9	1.3
BXR-12-10-030	12	30	24	23.7	0.99	24.3	F	5000	$1.88 imes 10^{-4}$	1500	$2.5 imes10^{6}$	0.120	0.030	0.8	2.3
BXR-14-10-038	14	38	24	31.0	1.29	18.6	F	3600	$4.22 imes 10^{-4}$	1800	$3.0 imes10^6$	0.120	0.030	0.5	3.0
BXR-16-10-055	16	55	24	19.0	0.79	30.3	F	3600	$7.10 imes 10^{-4}$	2000	$3.0 imes10^6$	0.220	0.100	0.5	3.6

* The armature pull-in time and armature release time are taken during DC switching. * Backlash is the value between the rotor and rotor hub.

Dimension (BXR- -10)

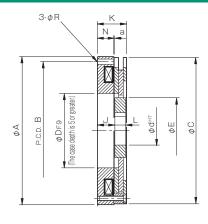

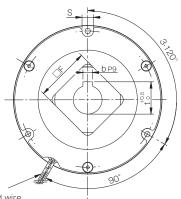

Lead wire length: 400 *The lead wire extraction position for size 14° is 60°.

																	Unit [mm]
Size			Rad	ial directio	on dimens	ions				Axial dir	rection din	nentions			Bore d	iameter	
Size	А	В	с	D	E	F	R	S	J	L	N	к	а	d	b	t	d max
06	83.5	76	82	47	42	35	4.5	9	17.0	7	14.7	25.0	0.10	20	6	22.5	25
08	93.5	85	92	49	42	35	4.5	10	19.0	7	15.7	27.0	0.10	20	6	22.5	25
10	123.5	115	122	62	55	45	4.5	9.5	14.6	9	13.7	24.3	0.10	24	8	27	28
12	137.5	130	136	65	62	50	4.5	12	15.4	9	12.5	25.0	0.15	24	8	27	30
14	167.5	158	166	80	74	60	5.5	12	16.0	9	12.0	25.0	0.15	28	8	31	38
16	185	175	184	100	86	65	5.5	12.5	21.3	11.5	19.4	32.8	0.20	28	8	31	45

How to Place an Order

BXR-14-10-038-24V-28DIN

Voltage Bore diameter (dimensional symbol d) Static friction torque [N·m]

(Refer to the Specifications table for details on the three-digit code.)

Shape fitting 10: Square

| Size


Web code C018

BXR Models Spline Hub Type

Specifications (BXR- 🗌 -20)

		Static		Coil (at	: 20°C)		Heat	Max.	Rotating part	Allowable braking	Total	Armature	Armature		
Model	Size	friction torque Ts [N·m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	resistance class	rotation speed [min ⁻¹]	moment of inertia J [kg·m ²]	energy rate Eba l [J]	braking energy ET[J]	pull-in time ta [s]	release time tar [s]	Backlash [°]	Mass [kg]
BXR-06-20-005	06	5	24	17.6	0.73	32.7	F	5000	$3.43 imes 10^{-5}$	500	$2.0 imes 10^5$	0.050	0.020	0.5	1.0
BXR-08-20-012	08	12	24	19.4	0.81	29.7	F	5000	$6.75 imes10^{-5}$	800	$2.0 imes 10^5$	0.080	0.020	0.4	1.3
BXR-10-20-016	10	16	24	21.5	0.90	26.8	F	5000	2.32×10^{-4}	1500	$2.2 imes 10^6$	0.110	0.050	0.3	1.5
BXR-12-20-030	12	30	24	23.7	0.99	24.3	F	5000	$3.02 imes 10^{-4}$	1500	$2.5 imes10^{6}$	0.120	0.030	0.3	2.5
BXR-14-20-038	14	38	24	31.0	1.29	18.6	F	3600	9.41 × 10 ⁻⁴	1800	$3.0 imes10^{6}$	0.120	0.030	0.2	3.4
BXR-16-20-055	16	55	24	19.0	0.79	30.3	F	3600	15.2 × 10 ⁻⁴	2000	$3.0 imes10^6$	0.220	0.100	0.2	4.0

* The armature pull-in time and armature release time are taken during DC switching. * Backlash is the value between the rotor and rotor hub.

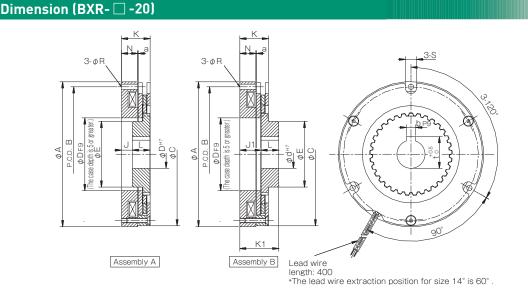


																		I	Unit [mm]
Size			Radia	al directio	on dimen	sions					Axial dir	ection di	nentions				Bore di	ameter	
Size	Α	В	С	D	E	F	R	S	J	J1	L	Ν	К	K1	а	d	b	t	d max
06	83.5	76	82	47	36	35	4.5	9	10.5	18	12.5	14.7	25.0	30.5	0.10	20	6	22.5	25
08	93.5	85	92	49	42	35	4.5	10	11.5	20	13.5	15.7	27.0	33.5	0.10	20	6	22.5	30
10	123.5	115	122	62	56	45	4.5	9.5	9	18.2	15	13.7	24.3	33.2	0.10	24	8	27	40
12	137.5	130	136	65	61	50	4.5	12	8.8	17.8	15	12.5	25.0	32.8	0.15	24	8	27	45
14	167.5	158	166	80	75	60	5.5	12	7.2	17.2	16	12.0	25.0	33.2	0.15	28	8	31	55
16	185	175	184	100	82	65	5.5	12.5	13.6	24.6	18	19.4	32.7	42.6	0.20	28	8	31	65

BXR-14-20-038-24V-28DIN

How to Place an Order

Size Voltage Bore diameter (dimensional symbol d)



I Static friction torque [N·m] (Refer to the Specifications table for details on the three-digit code.)

efer to the Specifications table for details on the three-digit code.)

Web code

Shape fitting 20: Spline COUPLINGS ETP BUSHINGS ELECTROMAGNETIC CLUTCHES & BRAKES SPEED CHANGERS & REDUCERS INVERTERS LINEAR SHAFT DRIVES TORQUE LIMITERS ROSTA

SERIES

ELECTROMAGNETIC-ACTUATED MICRO CLUTCHES & BRAKES ELECTROMAGNETIC-ACTUATED CLUTCHES & BRAKES ELECTROMAGNETIC CLUTCH & BRAKE UNITS SPRING-ACTUATED BRAKE ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

POWER SUPPLIES

MODELS
BXW
BXR
BXL
вхн
BXL-N

To download CAD data or product catalogs:

C018

BXR Models

Items Checked for Design Purposes

Precautions for Handling

Brakes

Most electromagnetic braking systems are made using flexible materials. Be careful when handling such parts and materials as striking or dropping them or applying excessive force could cause them to become damaged or deformed.

Lead Wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles, or allow them to hang too low.

Frictional Surface

Since these are dry brakes, they must be used with the frictional surface dry. Keep water and oil off of the frictional surfaces when handling the brakes.

Precautions for Use Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust, and other particles that could affect the braking system.

Operating Temperature

The operating temperature range is -10° C to 40° C. If you will use the product at other temperatures, consult Miki Pulley.

Power Supplies

BXR models use commercial AC 100 V or 200 V single phase, full-wave rectified. Select as appropriate for your application. See the table, "Recommended power supplies and circuit protectors," for the power supply devices we recommend.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme changes in power supply voltage. Make sure to keep power supply voltage to within \pm 10% of the rated voltage value.

Air Gap Adjustment

BXR models do not require air gap adjustment. The brake air gap is adjusted when the braking system is shipped from the factory.

Circuit Protectors

If using a power supply that is not equipped with a circuit protector for DC switching, make sure to connect the recommended circuit protector device in parallel with the brake.

Precautions for Mounting Affixing the Rotor Hub

Affix the rotor hub to the shaft with bolts, snap rings, or the like such that the rotor hub does not touch the armature or stator. Leave at least dimension J on spline hub types, since the rotor hub may contact the armature.

Bolts and Screws

Implement screw-locking measures such as use of an adhesive threadlocking compound to bolts and screws used to install brakes.


Shafts

The shaft tolerance should be h7 class (JIS B 0401).

Accuracy of Brake Attachment Surfaces

Ensure that the concentricity (X) of the centering mark and shaft and the perpendicularity (Y) of the brake mounting surface and shaft do not exceed allowable values.

Size	Concentricity (X)	Perpendicularity (Y)
Size	T.I.R. [mm]	T.I.R. [mm]
06	0.3	0.04
08	0.3	0.05
10	0.4	0.05
12	0.4	0.06
14	0.6	0.06
16	0.6	0.07

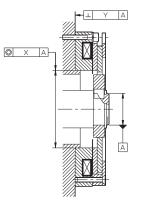

Recommended Power Supplies and **Circuit Protectors**

Recommended power supplies

Input AC power	Brake voltage	Rectification method	Brake size	Recommended power supply model
AC100V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71-1
AC100V 50/60Hz	DC24V	Single-phase, full-wave	12,14,16	BES-20-72-1
AC200V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71
AC200V 50/60Hz	DC24V	Single-phase, full-wave	12,14,16	BES-20-72

* A DC power supply such as a battery can also be used to supply the 24 V DC required for the brake voltage.

Circuit protector

Brake voltage	Included varistors							
DC24V	NVD07SCD082 or an equivaler							
* NVD SCD parts are manufactured by KOA Corporation.								



SERIES



BRAKE MOTORS

MODE	S
BXW	
BXR	
BXL	
BXH	
BXL-N	


BXL Models

Speci	Ifica	ations																
	Static		Coil (at 20°C)				Heat	Max.	Rotating part	Allowable	Total	Armature	Armature					
Model	Size	friction torque T₅ [N∙m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	resistance class	rotation speed [min ⁻¹]	moment of inertia J [kg∙m²]	braking energy rate Pbaℓ [W]	braking energy Et [J]	pull-in time ta [s]	release time tar [s]	Mass [kg]				
			DC24	15	0.63	38.4	F											
BXL-06-10	06	2	DC45	12	0.27	169	F	5000	3.75 × 10 ⁻⁵	5000 3.75 × 10 ⁻⁵	5000 3.75 × 10 ⁻⁵		5000 3.75 × 10 ⁻⁵ 58		$2.0 imes 10^7$	0.035	0.020	0.9
			DC90	12	0.13	677	F											
			DC24	23	0.94	25.6	F											
BXL-08-10	08	4	DC45	18	0.41	110	F	5000 6.2	5000	6.25 × 10 ⁻⁵	91.7	$3.5 imes 10^{7}$	0.040	0.020	1.3			
			DC90	18	0.21	440	F											
			DC24	27	1.14	21.1	F											
BXL-10-10	10	8	DC45	25	0.54	83.0	F	4000	$13.75 imes 10^{-5}$	108.3	$6.2 imes 10^{7}$	0.050	0.025	2.3				
			DC90	25	0.27	331	F											
BXL-12-10	12	16	DC24	35	1.46	16.2	F	3600	33.75 × 10⁻⁵	133.3	9.0 × 10 ⁷	0.070	0.030	3.4				
DAE-12-10	12	10	DC90	30	0.33	271	F	5000	55.75 × 10		2.0 × 10	0.070	0.050	5.4				
BXL-16-10	16	22	DC24	39	1.64	14.6	F	3000	7.35 × 10 ⁻⁴	183.3	11.4×10^{7}	0.100	0.035	5.4				
DVF-10-10	10	22	DC90	39	0.43	207	F	5000	1.57	103.5	11.4 × 10	0.100	0.000	5.4				

* The armature pull-in time and armature release time are taken during DC switching.

* See the operating characteristics page for the armature pull-in time and release time during AC-side switching (half-wave rectified).

Dimensions

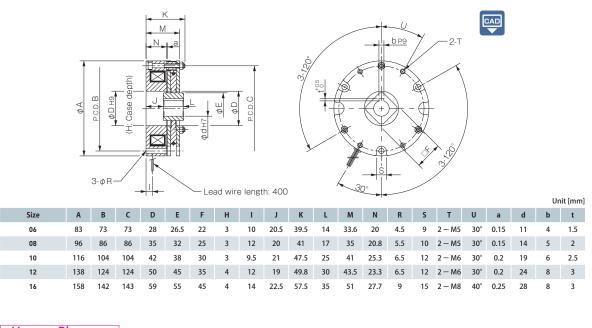

How to Place an
Order

BXL-06-10G 24V 11DIN

Size	Bore diameter (dimensional symbol d)
Option number 10: Standard	Voltage (Specifications table)

*Contact Miki Pulley for assistance with bore diameters, d, not listed in the Dimensions tales and voltages not listed in the Specifications table.

ELECTROMAGNETIC

CLUTCHES & BRAKES


Option

Made to Order

Release Lever

Option No.: 12

In addition to the manual release tap of the standard product, we also offer an optional manual release lever. See the dimensions table below for the dimensions of brakes with release levers. Other specifications are the same as the standard specifications.

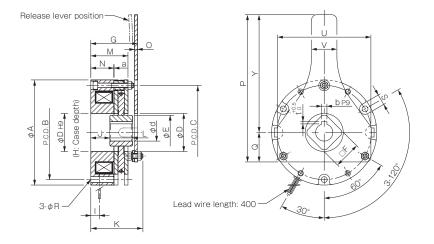

																									Uni	t [mm]
Model	Α	В	с	D	Е	F	G	н	1	J	К	L	м	Ν	0	Р	Q	R	Y	U	٧	S	а	d	b	t
BXL-06-12	83	73	73	28	26.5	22	42.4	3	10	20.5	49.5	14	33.7	20	2.6	88	24	4.5	64	73	16	9	0.15	11	4	1.5
BXL-08-12	96	86	86	35	32	25	44	3	12	20	51	17	35	20.8	2.9	122	27	5.5	95	85	20	10	0.15	14	5	2
BXL-10-12	116	104	104	42	38	30	51.2	3	9.5	21	57.5	25	41	25.3	3.2	162.5	32.5	6.5	130	103	28	12	0.2	19	6	2.5
BXL-12-12	138	124	124	50	45	35	56.4	4	12	19	64.8	30	43.5	23.3	5	200	40	6.5	160	121	36	12	0.2	24	8	3
BXL-16-12	158	142	143	59	55	45	64.9	4	14	22.5	72.5	35	51	27.7	6	230	44	9	186	140	36	15	0.25	28	8	3

Quiet Mechanism (Silencing Spring)

Option No.: S1

There is a extremely small structural backlash (see figure on the right) between the rotor and the rotor hub. In applications that are prone to microvibrations of the drive shaft such as single-phase motors, this backlash may produce rattling (banging). The silencing spring for the rotor hub reduces this rattling.


Quiet Mechanism (Pull-in Noise Reduction Mechanism)

Option No.: S2

То

When the brake is energized, a magnetic circuit is formed, and the armature is pulled to the stator by that magnetic force. At that time, the armature touches the magnetic pole of the stator and a noise is produced. This sound (pull-in noise) is reduced by putting shock absorbing material in the stator's magnetic pole part.

In option S2, in addition to the pull-in noise reduction mechanism, the silencing spring (option S1) is also supplemented.

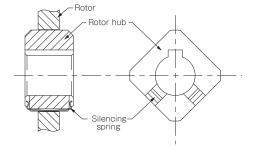

List of Option Numbers

Description of options	No quiet mechanism	Silencing spring	Silencing spring + Pull-in noise reduction mechanism
No release lever	10	1051	1052
Has release lever	12	1251	1252
* Option 10 uses standard	specifications.		

BXL-06-12S1G 24V 11DIN

Web code



ELECTROMAGNETIC-ACTUATED MICRO CLUTCHES & BRAKES ELECTROMAGNETIC-ACTUATED CLUTCHES & BRAKES ELECTROMAGNETIC CLUTCH & BRAKE UNITS SPRING-ACTUATED BRAKE ELECTROMAGNETIC TOOTH CLUTCHES

SERIES

BRAKE MOTORS

POWER SUPPLIES

download CAD data	or product catalogs:	
dominoud Crib dutu	or product catalogs.	

C019

Option no

BXL Models

Items Checked for Design Purposes

Precautions for Handling Brakes

Most electromagnetic braking systems are made using flexible

materials. Be careful when handling such parts and materials as striking or dropping them or applying excessive force could cause them to become damaged or deformed.

Lead Wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles, or allow them to hang too low.

Precautions for Mounting

Affixing the Rotor Hub

Affix the rotor hub to the shaft with bolts, snap rings, or the like such that the rotor hub does not touch the armature or stator.

Bolts and Screws

Implement screw-locking measures such as use of an adhesive threadlocking compound to bolts and screws used to install brakes.

Shafts


The shaft tolerance should be h6 or js6 class (JIS B 0401).

Accuracy of Brake Attachment Surfaces

Ensure that the concentricity of the centering mark and shaft and the perpendicularity of the brake mounting surface and shaft do not exceed the following allowable values.

- Concentricity of centering mark and shaft
 - BXL-06: 0.4 T.I.R. or below BXL-08: 0.4 T.I.R. or below BXL-10: 0.4 T.I.R. or below BXL-12: 0.6 T.I.R. or below
- BXL-16: 0.6 T.I.R. or below • Perpendicularity of stator mounting surface BXL-06: 0.04 T.I.R. or below

BXL-08: 0.05 T.I.R. or below BXL-10: 0.05 T.I.R. or below BXL-12: 0.06 T.I.R. or below BXL-16: 0.07 T.I.R. or below

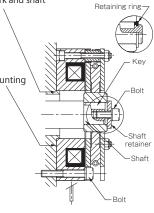

Precautions for Use

Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust, and other particles that could affect the braking system.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme changes in power supply voltage. Make sure to keep power supply voltage to within \pm 10% of the rated voltage value.

Operating Temperature

The operating temperature is -10° C to 40° C (no freezing or condensation). If you will use the product at other temperatures, consult Miki Pulley.

Manual Release

BXL models can be released manually.

Alternately tighten screws in two or three of the tap holes on the plate to press the armature.

The screw tips will push against the armature and release it with about a 90° rotation. Do not force the screws in more than that.

Air Gap Adjustment

BXL models do not require air gap adjustment. The brake air gap is adjusted when the braking system is shipped from the factory. When first used, no gap adjustment is needed, so do not rotate the nut.

Initial Torque

The torque may be lower than the indicated value at initial use. In such cases, run it to break in the frictional surface before use.

Circuit Protectors

If using a power supply that is not equipped with a circuit protector for DC switching, make sure to connect the recommended circuit protector device in parallel with the brake.

Recommended Power Supplies and Circuit Protectors

Recommended power supplies

Input AC power	Brake voltage	Rectification method	Brake size	Recommended power supply model
AC100V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71-1
AC100V 50/60Hz	DC24V	Single-phase, full-wave	12,16	BES-20-72-1
AC100V 50/60Hz	DC45V	Single-phase, half-wave	06,08,10	BEW-1R
AC100V 50/60Hz	DC90V	Single-phase, full-wave	06,08,10,12,16	BEW-1R
AC200V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71
AC200V 50/60Hz	DC24V	Single-phase, full-wave	12,16	BES-20-72
AC200V 50/60Hz	DC90V	Single-phase, half-wave	06,08,10,12,16	BEW-2R
AC200V 50/60Hz	DC90V	Single-phase, half-wave	06,08,10,12,16	BEW-2R
* A DC power supply su	ch as a battony can	also be used to sur	only the 24 V DC re-	quired for the brake

* A DC power supply such as a battery can also be used to supply the 24 V DC required for the bra voltage.

Recommended circuit protectors

Input voltage	Brake voltage	Rectification method	Recommended circuit protector (varistor)					
DC24V	DC24V	_	NVD07SCD082 or an equivalent					
AC100V 50/60Hz	DC45V	Single-phase, half-wave	NVD07SCD220 or an equivalent					
AC100V 50/60Hz	DC90V	Single-phase, full-wave	NVD07SCD220 or an equivalent					
AC200V 50/60Hz DC90V Single-phase, half-wave NVD07SCD470 or an equivalent								
* NVD 🗆 SCD 🗆 parts are manufactured by KOA Corporation.								

* DC24V indicates a product recommended with a stepdown transformer or the like.

Included varistors

Brake voltage	Included varistors
DC24V	NVD07SCD082 or an equivalent
DC45V	No varistor provided
DC90V	No varistor provided



SERIES

ELECTROMAGNET	ELECTROMAGNETIC- ACTUATED MICRO CLUTCHES & BRAKES					
IC-ACTUATED CLUT	ELECTROMAGNETIC- ACTUATED CLUTCHES & BRAKES					
CHES AND BRAKES	ELECTROMAGNETIC CLUTCH & BRAKE UNITS					
SPRING-ACTUATED BRAKE						

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

MODEL	i	
BXW		
BXR		
BXL		
вхн		
BXL-N		


BXH Models

Specificati	ons	;												
		Static	Coil (at 20°C)				Heat Max.	Rotating part	Allowable	Total	Armature	Armature		
Model	Size	friction torque Ts [N·m]	Voltage [V]	Wattage [W]	Current [A]	Resistance [Ω]	resistance class	rotation speed [min ⁻¹]	moment of inertia J [kg∙m²]	braking energy rate Eba l [J]	braking energy ET [J]	pull-in time ta [s]	release time tar [s]	Mass [kg]
			DC24	15	0.63	38.4	F							
BXH-06-10	06	4	DC45	12	0.27	169	F	5000	3.25×10^{-5}	700	$2.0 imes 10^{6}$	0.040	0.020	0.9
			DC90	12	0.13	677	F							
			DC24	23	0.94	25.6	F							
BXH-08-10	08	8	DC45	18	0.41	110	F	5000	5.75 × 10 ⁻⁵	1100	3.5 × 10 ⁶	0.045	0.020	1.3
			DC90	18	0.21	440	F							
			DC24	27	1.14	21.1	F							
BXH-10-10	10	16	DC45	25	0.54	83	F	4000	1.30×10^{-4}	1300	6.2 × 10 ⁶	0.070	0.025	2.3
			DC90	25	0.27	331	F							
BXH-12-10	12	32	DC24	35	1.46	16.2	F	3600	3.20 × 10 ^{−4}	1600	9.0 × 10 ⁶	0.090	0.025	3.4
			DC90	30	0.33	271	F							
BXH-16-10	16	44	DC24	39	1.64	14.6	F	3000	6.93 × 10 ⁻⁴	2200	11.4 × 10 ⁶	0.125	0.030	5.4
			DC90	39	0.43	207	F			00				

 * The armature pull-in time and armature release time are taken during DC switching.

* See the operating characteristics page for the armature pull-in time and release time during AC-side switching (half-wave rectified).

Dimensions

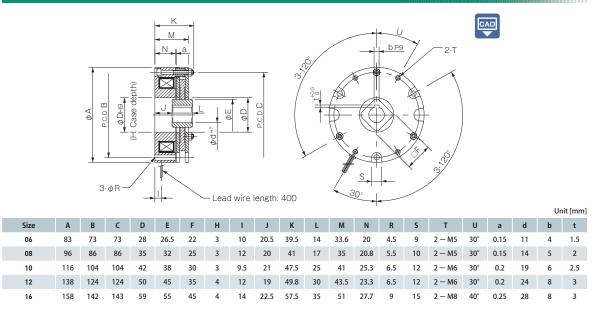



BXH-06-10G 24V 11DIN

Bore diameter (dimensional symbol d)
 Voltage (Specifications table)

Option number 10: Standard

Size

Standard

*Contact Miki Pulley for assistance with bore diameters, d, not listed in the Dimensions tales and voltages not listed in the Specifications table.

ELECTROMAGNETIC

CLUTCHES & BRAKES


Option

Made to Order

Release Lever

Option No.: 12

In addition to the manual release tap of the standard product, we also offer an optional manual release lever. See the dimensions table below for the dimensions of brakes with release levers. Other specifications are the same as the standard specifications.

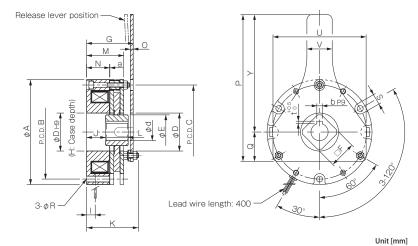


Model	Α	В	С	D	Е	F	G	н	1	J	К	L	М	Ν	0	Р	Q	R	Y	U	۷	S	а	d	b	t
BXH-06-12	83	73	73	28	26.5	22	42.8	3	10	20.5	49.5	14	33.7	20	2.6	105	24	4.5	81	73	20	9	0.15	11	4	1.5
BXH-08-12	96	86	86	35	32	25	45.4	3	12	20	56	17	35.3	20.8	4	122	27	5.5	95	85	20	10	0.2	14	5	2
BXH-10-12	116	104	104	42	38	30	53.9	3	9.5	21	63	25	42.2	25.3	4.5	162.5	32.5	6.5	130	103	28	12	0.25	19	6	2.5
BXH-12-12	138	124	124	50	45	35	58.3	4	12	19	70	30	45.4	23.3	5	200	40	6.5	160	121	36	12	0.25	24	8	3
BXH-16-12	158	142	143	59	55	45	66.5	4	14	22.5	72.5	35	53.3	27.7	6	230	44	9	186	140	36	15	0.25	28	8	3

Quiet Mechanism (Silencing Spring)

Option No.: S1

There is a extremely small structural backlash (see figure on the right) between the rotor and the rotor hub. In applications that are prone to microvibrations of the drive shaft such as single-phase motors, this backlash may produce rattling (banging). The silencing spring for the rotor hub reduces this rattling.

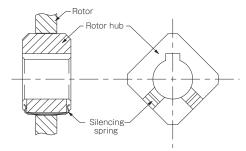

CHANGERS JCERS 'ERS SHAFT DRIVES IE LIMITERS

SERIES

	ELECTROMAGNETIC- ACTUATED MICRO CLUTCHES & BRAKES					
TIC ACTINTED CIT	ELECTROMAGNETIC- ACTUATED CLUTCHES & BRAKES					
FUEC AND DDAVEC	ELECTROMAGNETIC CLUTCH & BRAKE UNITS					
SPRING-ACTUATED BRAKE						

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

POWER SUPPLIES

List	of Opt	ion Nu	mbers
------	--------	--------	-------

Description of options	No quiet mechanism	With silencing spring					
No release lever	10	1051					
Has release lever	12	1251					
* Option 10 uses standard specifications.							

BXH-06-12S1G 24V 11DIN

Option no.

MODELS
BXW
BXR
BXL
вхн
BXL-N

Web code

BXH Models

Items Checked for Design Purposes

Precautions for Handling

Brakes

Most electromagnetic braking systems are made using flexible materials. Be careful when handling such parts and materials as striking or dropping them or applying excessive force could cause them to become damaged or deformed.

Lead Wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles, or allow them to hang too low.

Precautions for Mounting

Affixing the Rotor Hub

Affix the rotor hub to the shaft with bolts, snap rings, or the like such that the rotor hub does not touch the armature or stator.

Bolts and Screws

Implement screw-locking measures such as use of an adhesive threadlocking compound to bolts and screws used to install brakes.


Shafts

The shaft tolerance should be h6 or js6 class (JIS B 0401).

Accuracy of Brake Attachment Surfaces

Ensure that the concentricity of the centering mark and shaft and the perpendicularity of the brake mounting surface and shaft do not exceed the following allowable values.

- Concentricity of centering mark and shaft BXH-06: 0.4 T.I.R. or below BXH-08: 0.4 T.I.R. or below BXH-10: 0.4 T.I.R. or below BXH-12: 0.6 T.I.R. or below BXH-16: 0.6 T.I.R. or below
 Perpendicularity of stator
- mounting surface BXH-06: 0.04 T.I.R. or below BXH-08: 0.05 T.I.R. or below BXH-10: 0.05 T.I.R. or below BXH-12: 0.06 T.I.R. or below BXH-16: 0.07 T.I.R. or below

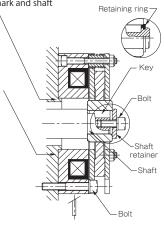

Precautions for Use Dedicated for Holding

These brakes are dedicated holding brakes. Do not use them for ordinary braking, except for emergency braking in the event of a power outage or the like.

Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust, and other particles that could affect the braking system.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme changes in power supply voltage. Make sure to keep power supply voltage to within \pm 10% of the rated voltage value.

Operating Temperature

The operating temperature is -10°C to 40°C (no freezing or condensation). If you will use the product at other temperatures, consult Miki Pulley.

Manual Release

BXH models can be released manually.

Alternately tighten screws in two or three of the tap holes on the plate to press the armature.

The screw tips will push against the armature and release it with about a 90° rotation. Do not force the screws in more than that.

Air Gap Adjustment

BXH models do not require air gap adjustment. The brake air gap is adjusted when the braking system is shipped from the factory. When first used, no gap adjustment is needed, so do not rotate the nut.

Circuit Protectors

If using a power supply that is not equipped with a circuit protector for DC switching, make sure to connect the recommended circuit protector device in parallel with the brake.

Recommended Power Supplies and Circuit Protectors

Recommended power supplies

Input AC power	Brake voltage	Rectification method	Brake size	Recommended power supply model
AC100V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71-1
AC100V 50/60Hz	DC24V	Single-phase, full-wave	12,16	BES-20-72-1
AC100V 50/60Hz	DC45V	Single-phase, half-wave	06,08,10	BEW-1R
AC100V 50/60Hz	DC90V	Single-phase, full-wave	06,08,10,12,16	BEW-1R
AC200V 50/60Hz	DC24V	Single-phase, full-wave	06,08,10	BES-20-71
AC200V 50/60Hz	DC24V	Single-phase, full-wave	12,16	BES-20-72
AC200V 50/60Hz	DC90V	Single-phase, half-wave	06,08,10,12,16	BEW-2R
AC200V 50/60Hz	DC90V	Single-phase, half-wave	06,08,10,12,16	BEW-2R
A DC nower supply	such as a battery ca	n also he used to su	innly the 24 V DC re	quired for the brake

* A DC power supply such as a battery can also be used to supply the 24 V DC required for the br voltage.

Recommended circuit protectors

Input voltage	Brake voltage	Rectification method	Recommended circuit protector (varistor)			
DC24V	DC24V	_	NVD07SCD082 or an equivalent			
AC100V 50/60Hz	DC45V	Single-phase, half-wave	NVD07SCD220 or an equivalent			
AC100V 50/60Hz	DC90V	Single-phase, full-wave	NVD07SCD220 or an equivalent			
AC200V 50/60Hz	DC90V	Single-phase, half-wave	NVD07SCD470 or an equivalent			
* NVD SCD parts are manufactured by KOA Corporation.						

* DC24V indicates a product recommended with a stepdown transformer or the like.

Included varistors

Brake voltage	Included varistors
DC24V	NVD07SCD082 or an equivalent
DC45V	No varistor provided
DC90V	No varistor provided



SERIES ELECTROMAGNETICACTUATED MICRO CLUTCHES & BRAKES ELECTROMAGNETICACTUATED CLUTCHES & BRAKES ELECTROMAGNETIC CLUTCH & BRAKE UNITS SPRING-ACTUATED BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

MODELS
BXW
BXR
BXL
вхн
BXL-N

BXL-N Models


Specifications Coil (at 20°C) Static friction Max. rotation Rotating part moment of Allowable braking energy Total braking Armature pull-in Armature Applicable Heat motor output (Reference) Four poles [kW] Mass release Size Model sistance Voltage Wattage Current Resistance torque Ts[N•m] speed [min⁻¹] inertia J [kg•m²] rate Pbal [W] time ta [s] time tar [s] [**kg**] energy Et [J] class [V] [W] [A] [Ω] 24 19.0 0.793 30.3 F BXL-08-10N-002 08 2 99 19.0 0.192 515.8 F 3600 6.3×10^{-5} 60.0 5.0×10^{7} 0.030 0.050 0.1/0.2 1.4 171 19.0 0.111 1539 F 24 19.0 0.793 30.3 F BXL-08-10N-004 08 4 99 19.0 0.192 515.8 F 3600 6.3 × 10⁻⁵ 60.0 5.0×10^{7} 0.040 0.040 0.4 1.4 171 19.0 0.111 1539 F 24 28.0 1.166 20.6 F BXL-10-10N-008 10 8 99 28.0 0.283 350.0 F 3600 13.8 × 10⁻⁵ 70.0 8.0 × 10⁷ 0.050 0.050 0.75 2.7 171 28.0 0.164 1044 F 24 28.0 20.6 1.166 F BXL-10-10N-015 10 15 99 28.0 0.283 350.0 3600 13.8 × 10⁻⁵ 70.0 8.0 × 10⁷ 0.070 0.030 1.5 2.7 F 171 28.0 0.164 1044 F 24 35.0 1.460 16.4 F BXL-12-10N-022 22 99 35.0 0.353 280.1 3600 33.8 × 10⁻⁵ 2.2 4.7 12 F 90.0 12.0 × 107 0.080 0.060 171 35.0 0.205 835.5 F 24 35.0 1.460 16.4 F BXL-12-10N-030 12 99 0.353 280.1 F 3600 33.8 × 10⁻⁵ 0.100 0.030 4.7 30 35.0 90.0 12.0×10^{7} 3.0 171 35.0 0.205 835.5 F 24 42.0 1.753 13.7 F BXL-16-10N-040 99 0.424 233.3 F 73.5×10^{-5} 0.070 16 40 42.0 1800 120.0 16.0×10^{7} 0.100 3.7 6.3 171 42.0 0.246 696.1 F 24 2.294 55.0 10.5 F BXL-16-10N-060 55.0 178.1 0.050 6.7 16 60 99 0.556 F 1800 74.6 × 10⁻⁵ 150.0 16.0×10^{7} 0.100 5.5 171 55.0 0.322 531.6 F 24 55.0 2.294 10.5 F BXI -16-10N-080 16 80 99 55.0 0.556 178.1 F 1800 74.6 × 10⁻⁵ 150.0 16.0×10^{7} 0.100 0.030 7.5 6.7 171 55.0 0.322 531.6 F


*The armature pull-in time and armature release time are taken during DC switching.

Dimensions

Order

Φ

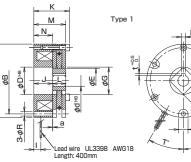


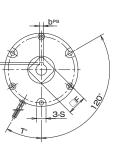

Size

specifications table)

Static torque (refer to the

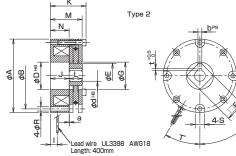

	~ /
AWG18	430

Unit [mm]

																			-	inc [ini
Model	Туре	Α	В	D	E	F	G	- I -	J	K	L	М	Ν	R	S	Т	а	d	b	t
L-08-10N-002	1	94	85	35	32	25	35	9	24	45.7	17	40.7	24	5.5	12	30	0.3	11	4	1.5
L-08-10N-004	1	94	85	35	32	25	35	9	24	45.7	17	40.7	24	5.5	12	30	0.3	14	5	2
KL-10-10N-008	1	124	110	40	38	30	42	10	22	48.7	25	42.7	26	6.5	12	30	0.3	18	6	2.5
KL-10-10N-015	1	124	110	40	38	30	42	10	22	48.7	25	42.7	26	6.5	12	30	0.3	20	6	2.5
XL-12-10N-022	1	150	130	49	45	35	50	18	25	57.1	30	51.1	29	6.5	14	30	0.3	24	8	3
XL-12-10N-030	1	150	130	49	45	35	50	18	25	57.1	30	51.1	29	6.5	14	30	0.3	24	8	3
KL-16-10N-040	1	165	150	62	55	45	62	18	24	63.1	35	55.1	28	9	15	30	0.3	28	8	3
XL-16-10N-060	2	165	150	64	61	50	64	20	29	68.1	35	60.1	33	9	15	15	0.3	37	10	3.5
XL-16-10N-080	2	165	150	64	61	50	64	20	29	68.1	35	60.1	33	9	15	15	0.3	37	10	3.5

BXL-08-10N-004-24V-11

-Bore diameter (dimensional symbol d) - Voltage (refer to the specifications table)

* Contact Miki Pulley for assistance with bore diameters, d, not listed in the Dimensions tales and voltages not listed in the Specifications table,

Option

Plate Installation

Standard installation is performed using stator installation, but a plate installation specification is also available as an option. Please contact Miki Pulley for assistance if desiring to use plate installation.

Ouiet Mechanism

There is a slight backlash between the rotor and the rotor hub. The armature may also strike the surface of the magnetic poles on the stator when electricity flows, generating a noise. There is a quiet mechanism available that works to suppress such clattering noises as well as operating noise. Please contact Miki Pulley for details.

Items Checked for Design Purposes

Precautions for Handling

Brakes

Most electromagnetic braking systems are made using flexible materials. Be careful when handling such parts and materials as striking or dropping them or applying excessive force could cause them to become damaged or deformed.

Lead Wires

Be careful not to pull excessively on the brake lead wires, bend them at sharp angles, or allow them to hang too low.

Frictional Surface

Since these are dry brakes, they must be used with the frictional surface dry. Keep water and oil off of the frictional surfaces when handling the brakes.

Precautions for Use

Environment

These brake units are dry braking systems, meaning that the torque will drop if oil residue, moisture, or other liquids get onto friction surfaces. Attach the protective cover when working in areas with oil, moisture, dust, and other particles that could affect the braking system.

Operating Temperature

The operating temperature is from 0°C to 40°C (no freezing or condensation). If you will use the product at other temperatures, consult Miki Pulley.

Power Supplies

BXL-N models use commercial AC 220 V or 380 V single phase, half-wave rectified. Select as appropriate for your application.

Power Supply Voltage Fluctuations

Full braking performance may not be guaranteed with extreme changes in power supply voltage. Make sure to keep power supply voltage to within \pm 10% of the rated voltage value.

Air Gap Adjustment

BXL-N models do not require air gap adjustment. The brake air gap is adjusted when the braking system is shipped from the factory.

Circuit Protectors

If using a power supply for separate DC switching, make sure to connect the recommended circuit protector device in parallel with the brake.

Recommended Power Supplies and Circuit Protectors

Model	Rectification method	Frequency [Hz]	Input AC voltage [V]	DC output voltage *1 [V]	Recommended circuit protectors *2 (Varistor)
BEM-2T	Single-phase, half-wave	50/60	AC220	DC99	NVD07SCD220 or an equivalent
BEM-4T	Single-phase, half-wave	50/60	AC380	DC171	NVD14SCD820 or an equivalent

*1 The values given are for when there is electricity flowing to the brake coil. *2 NVD SCD parts are manufactured by KOA Corporation

Precautions for Mounting

Precautions for Mounting

Use a bolt or snap ring to lock the rotor hub onto the shaft. Shaft

The shaft tolerance should be h7 class (JIS B 0401).


Bolts and Screws

Stator

Implement screw-locking measures such as use of an adhesive thread-locking compound to bolts and screws used to install brakes.

Accuracy of Brake Attachment Surfaces

Ensure that the concentricity (X) of the centering mark and shaft and the perpendicularity (Y) of the brake mounting surface and shaft do not exceed allowable values.

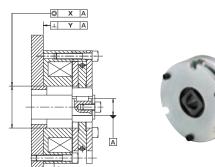



BXW	
BV6	
BXR	
BXL	
вхн	
BXL-N	

ELECTROMAGNETIC

CLUTCHES & BRAKES

SERIES



SPRING-ACTUATED BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

POWER SUPPLIES

Allowable concentricity and perpendicularity values for the **BXL-N Models**

Size	Concentricity (X)	Perpendicularity (Y)
JIZE	T.I.R. [mm]	T.I.R. [mm]
08	0.4	0.05
10	0.4	0.05
12	0.6	0.05
16	0.6	0.05

Armature


Rotor

Plate

Rotor hub

Selection Procedure for Brakes for Braking

Consideration of Required Torgue to Brake Loads

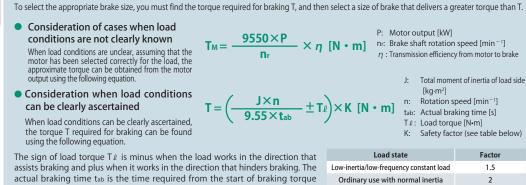

generation until braking is complete. When this is not clearly known at the selection stage, a guideline value is used that factors in service life and the like.

Select a brake of a size for which the torque T found in the equation of step 1 satisfies the following equation.

High-inertia/high-frequency load fluctuation

3

A brake of a size for which torque T found from the equations above satisfies the following equation must be selected.

Tb > T (or Tm) [N•m] Tb: Brake torque [N•m] * For brake torque, treat Ts as equaling Tb. (Ts: Static friction torque from specifications table)

Consideration of Energy

Provisional Size Selection

When the load required for braking is sufficiently small, the size can be selected considering only torque T as described above. Given the effects of heat generated by braking, however, the following equation must be used to confirm that the operation frequency per unit time and the total number of operations (service life) meet the required specifications

Use the following equation to find the energy Eb required for $E_b = \frac{J \times n^2}{182} \times \frac{T_b}{T_b + T_{\ell}}$ [J] a single braking operation.

The sign of load torque T ℓ is plus when the load works in the direction that assists braking and minus when it works in the direction that hinders braking.

 Confirm the frequency S of operations that can be performed per minute

Find the frequency of operations that can be performed per minute using the equation at right to confirm that the desired operation frequency is sufficiently smaller than the value found. Confirm the total number of operations (service life)

Find the total number of operations (service life) using the equation at right, and then check that it meets the desired service life



 $\mathbf{L} = \frac{\mathbf{E}_{\mathrm{T}}}{\mathbf{E}_{\mathrm{E}}} [\text{times}] \quad \text{ET: Total braking energy [J]}$

4

5

3

When there are limits on the time required to decelerate or stop the load, use the equation at right to confirm that the total braking time ttb satisfies requirements.

Consideration of Braking Time

Here, actual braking time tab is the time from the start of braking torque generation to the completion of braking. Find it with the following equation.

tar: Armature release time [s] $t_{tb} = t_{id} + t_{ar} + t_{ab}$

tid: Initial delay time [s]

 $\theta = 6 \times n \times (t_{id} + t_{ar} + \frac{1}{2} t_{ab}) [^{\circ}]$

 $\Delta \theta = \pm 0.15 \times \theta$ [°]

The sign of load torque T ℓ is plus when the load works in the direction that assists braking and minus when it works in the direction that hinders braking.

Consideration of Stopping Precision

To confirm stopping precision, find the stopping angle (rotation) using the following equation.

The variation in stopping precision--i.e., stopping precision $\varDelta\,\theta$ --can be found empirically with the following equation and used as a guide.

$$a_{ab} = \frac{J \times n}{9.55 \times (T_b \pm T_\ell)} [s]$$

tar: Armature release time [s] tid: Initial delay time [s]

360 MIKIPULLEY

ELECTROMAGNETIC

CLUTCHES & BRAKES

Selection Procedure for Brakes for Holding

Consideration of Required Torque to Hold Loads

Use the following equation to find the torque T required to hold a load while stationary.										
$T=T_{\ell \max} \times K[N \cdot m]$	Load state	Factor								
	Low inertia/small load fluctuations	1.5								
Tℓ max: Max. load torque [N•m]	Ordinary use with normal inertia	2								
K: Safety factor (see table at right)	High inertia/large load fluctuations	3								

Provisional Selection of Size

T

2

3

4

A brake of a size for which torque T found from the equations above satisfies the following equation must be selected. $T_s > T [N \cdot m]$ Ts: Static friction torque of brake [N-m]

Consideration of Energy

When considering a brake with the objective of holding loads, braking is limited to emergency braking. Use the following equation to find the braking energy E_b for a single operation required for emergency braking. You must confirm that this result is sufficiently smaller than the allowable braking energy $E_{bal} \ell$ of the selected brake. J: Total moment of inertia on load side [kg·m²]

$$E_{b} = \frac{J \times n^{2}}{182} \times \frac{T_{b}}{T_{b} \pm T_{\ell}} \begin{bmatrix} J \end{bmatrix} \begin{bmatrix} J \\ T_{b} \end{bmatrix} Rotation \\T_{b} Brake tor \\T_{\ell} max; Max, load$$

Rotation speed [min⁻¹] Brake torque [N·m] : Max. load torque [N•m]

The sign of maximum load torque T ℓ max is plus when the load works in the direction that assists braking and minus when it works in the direction that hinders braking.

 $E_b \ll E_{ba} \ell$ [J]

When using brakes for both holding and braking and the specification is indicated by allowable braking energy rate $P_{ba\,\ell}$, check under the following conditions.

 $E_b \!\ll\! 60 \times P_{ba\,\ell} \; [J]$

Consideration of Number of Operations

The total number of braking operations (service life) when performing emergency braking L must be found using the following equation to confirm that required specifications are satisfied.

 $\mathbf{L} = \frac{\mathbf{E}_{\mathsf{T}}}{\mathbf{E}_{\mathsf{b}}} \quad \text{[times]} \quad \text{ET: Total braking energy [J]}$

Note that the frequency of emergency braking will also vary with operating environment; however, it should be about once per minute or better. When the braking energy of a single operation E_b is 70% or more of the allowable braking energy $E_{ba}\ell$, however, allow the brake to cool sufficiently after emergency braking before resuming use.

	NEAR SHAFT DRIVES	
	ORQUE LIMITERS	
	OSTA	
SEF	RIES	
ELECTROMA GNE	ELECTROMAGNETIC- ACTUATED MICRO CLUTCHES & BRAKES	
IC-ACTUATED CLUT	ELECTROMAGNETIC- ACTUATED CLUTCHES & BRAKES	
CHES AND BRAKES	ELECTROMAGNETIC CLUTCH & BRAKE UNITS	
	PRING-ACTUATED RAKE	
	LECTROMAGNETIC	
_		


BRAKE MOTORS

MODE	S
BXW	
BXR	
BXL	
вхн	
BXL-N	

BXW/BXR/BXL/BXH Models

Selection Example 1

Braking Brakes Used in Raising Loads

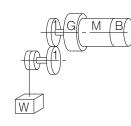

Selection of a brake to brake the load is as follows, as the above figure illustrates.

Motor (brake shaft) rotation speed	n	1800 [min-1]
Load shaft rotation speed	n 1	60 [min ⁻¹]
Moment of inertia of motor-side gear	J1	$1.5 \times 10^{-2} [kg \cdot m^2]$
Moment of inertia of load-side gear	J ₂	1.5 × 10 ⁻² [kg•m ²]
Moment of inertia of load-side drum	J3	4.30 [kg·m ²]
Moment of inertia of motor with speed reducer	Лм	6 × 10 ⁻³ [kg•m ²]
Moment of inertia of load	JA	15.67 [kg⋅m²]
Load-side torque	Т	62.5 [N•m]
Number of braking operations of brake	L	53,000 cycles or more
Brake operating frequency	S	0.1 [cycles/min]

* The number of braking operations and operation frequency treat one ascending operation and one

descending operation together as one cycle * The number of braking operations of the brake is treated as 6 (operations/h) $\, imes$ 8 (h/day) $\, imes$ 365 $(days/year) \times 3 (years)$

Consideration of Torque

The torque required for braking is calculated from the above specifications, compared to the dynamic friction torque in the catalog, and the appropriate brake size is selected.

· Calculating the inertial moment converted to brake shaft inertial moment JB

We use the following equation to calculate the moment of inertia converted to the brake shaft (motor shaft) moment of inertia JB[kg•m²]. Here, R represents the ratio of the motor rotation speed to the load shaft rotation speed.

$J_B=J_M+(J_1+J_2+J_3+J_A) \times R^2 [kg \cdot m^2]$

 $J_{B}=6\times10^{-3}+(1.5\times10^{-2}+1.5\times10^{-2}+4.30+15.67)$ \times (60/1800)² \Rightarrow 2.8×10⁻²[kg·m²]

• Calculating the load torque converted to brake shaft load torque T *i* We use the following equation to calculate the load torque converted to the brake shaft (motor shaft) load torque T & [N·m]. However, η indicates the transmission efficiency, which is 0.85 in this selection.

$T_{\ell} = R \times T/\eta [N \cdot m]$ T_ℓ=60/1800×62.5/0.85≒2.45 [N•m]

- · Calculating the torque required for braking T
- Use the following equation to calculate the torgue required for braking T [N•m].
- Here, the conditions are set as follows.

* The guideline for actual braking time tab is 2.0 [s].

- * The sign of load torgue TR is minus when ascending because the load works in the direction that assists braking and plus when descending because the load works in the direction that hinders braking. * Select a safety factor K of 3.0, based on operating conditions.

Ascending

$$T_{up} = \left(\frac{J_B \times n}{9.55 \times t_{ab}} - T_\ell\right) \times K$$
$$T_{up} = \left(\frac{2.8 \times 10^{-2} \times 1800}{9.55 \times 2.0} - 2.45\right) \times 3.0 \doteqdot 0.57 [N \cdot m]$$

Descending

$$T_{\text{DOWN}} = \left(\frac{J_{\text{B}} \times n}{9.55 \times t_{ab}} + T_{\ell}\right) \times K$$
$$T_{\text{DOWN}} = \left(\frac{2.8 \times 10^{-2} \times 1800}{9.55 \times 2.0} + 2.45\right) \times 3.0 \doteqdot 15.3 [\text{N} \cdot \text{m}]$$

Since the result of the above shows that required torque is 15.3 [N•m]. check the specifications in the catalog and select size 12 (dynamic friction torque of 16.0 [N·m]) of the BXL models of brakes for braking.

Consideration of Energy

Confirm that the brake selected based on required torque satisfies the required specifications for number of braking operations and braking frequency.

Calculating the total moment of inertia J

Adding the inertial moment converted to brake shaft inertial moment J_B that was just calculated to the inertial moment of the rotating parts of the provisionally selected BXL-12 (catalog value of 33.75×10^{-5}), we arrive at the total moment of inertia.

$J = 2.8 \times 10^{-2} + 33.75 \times 10^{-5} \\ \doteq 2.83 \times 10^{-2} [kg \cdot m^2]$

 Calculating the amount of energy required for one braking operation Eb The calculated total moment of inertia is used to calculate the energy required by a single braking operation. Here, the sign of load torque Tℓ is plus when ascending because the load works in the direction that assists braking and minus when descending because the load works in the direction that hinders braking.

Ascending

$$\begin{split} E_{bup} &= \frac{J \times n^2}{182} \times \frac{T_b}{T_b + T_{\ell}} \\ E_{bup} &= \frac{2.83 \times 10^{-2} \times 1800^2}{182} \times \frac{16.0}{16.0 + 2.45} \\ & \doteq 437 \, [J] \end{split}$$

Descending

$$E_{\text{bdown}} = \frac{J \times n^2}{182} \times \frac{T_b}{T_b - T_\ell}$$

$$E_{\text{bdown}} = \frac{2.83 \times 10^{-2} \times 1800^2}{182} \times \frac{16.0}{16.0 - 2.45}$$

$$\approx 595 [J]$$

Confirm the frequency S of operations that can be performed per minute

Substitute the energy required for a single braking Eb calculated above and the allowable braking energy rate $P_{ba\,\ell}$ for the BXL-12 (catalog value 133.3 W) into the following equation and calculate the frequency S of operations that can be performed per minute.

Ascending

$$S_{up} = \frac{60 \times P_{ba\,\ell}}{E_{bup}}$$
$$S_{up} = \frac{60 \times 133.3}{437}$$

≒ 18.3 [times/min.]

Descending

$$S_{\text{DOWN}} = \frac{60 \times P_{\text{ball}}}{E_{\text{bDOWN}}}$$
$$S_{\text{DOWN}} = \frac{60 \times 133.3}{595}$$
$$\Rightarrow 13.4 \text{ [times/min.]}$$

The desired operation frequency is sufficiently smaller than the calculated operation frequency, so the specification is satisfied. Note that the braking energy rate (catalog value) used in the calculation is the value under ideal conditions, so the desired operation frequency needs to be sufficiently small.

13.4 [times/min.] >> 0.1 [times/min.]

• Calculating the total number of operations (service life) Substituting in the just-calculated energy required for a single braking Eb and the BXL-12 total frictional energy ET (catalog value of 9.0×10^7 [J]), we arrive at the total number of operations L.

If the energy of a single cycle of ascending and descending E_b is:

$E_b = E_{bup} + E_{bDOWN}$

E_b=1032[J]

The total number of operations L is:

$$L = \frac{E_{T}}{E_{b}}$$

$$L = \frac{9.0 \times 10^{7}}{1032}$$

≒ 87209 [cycles]

The desired total number of operations is fewer than the calculated total number of operations (service life), so the specification is satisfied.

87,209 [cycles] > 53,000 [cycles]

Consideration of Braking Time

Total braking time t_{tb} is calculated as the sum of actual braking time t_{ab} , armature release time t_{ar} , and the initial delay time from start of command input to start of operating input t_{id}.

Here, the actual braking time is expected to be greater in the descending direction, so only the case of descending is considered. The sign of the load torque T ℓ is minus, since it is in the direction that impedes braking.

$$t_{ab} = \frac{J \times n}{9.55 \times (T_b - T_{\ell})}$$

$$t_{ab} = \frac{2.83 \times 10^{-2} \times 1800}{9.55 \times (16.0 - 2.45)}$$

$$\approx 0.39[s]$$

Here, the armature release time t_{ar} of the BXL-12 from the catalog is 0.03 [s]. The initial delay time t_{td} is the delay of the operation of relays and the like, so we use 0.025 [s], the typical relay operation time. Thus, the total braking time t_{tb} is:

$t_{tb} = 0.025 + 0.030 + 0.39$

≒0.445[s]

Consideration of Stopping Precision

When stopping precision (stopping distance) is restricted, calculate stopping precision using the following equations.

$\theta = 6 \times n \times (t_{id} + t_{ar} + 1/2 \times t_{ab})$ $= 2700[^{\circ}]$

The variation in stopping precision—i.e., stopping precision $\bigtriangleup \theta$ —can be found empirically with the following equation and used as a guide.

This angle is the angle at the brake shaft, so when the stopping precision θ max is 2700 + 405 = 3105 [°] and the drum diameter Dd is 0.5 [m], the braking distance Bd of load W is:

$B_{d} = \theta \max/360 \times R \times \pi \times D_{d} = (3105/360) \times (60/1800) \times \pi \times 0.5 = 0.45[m]$

If there is no problem with the braking time and stopping precision, BXL-12 can be selected.



ELECTROMAGNETIC-ACTUATED MICRO CLUTCHES & BRAKES ELECTROMAGNETIC ACTUATED CLUTCHES & BRAKES ELECTROMAGNETIC CLUTCH & BRAKE UNITS SPRING-ACTUATED

BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES


BRAKE MOTORS

MODELS	
BXW	
BXR	
BXL	
вхн	
BXL-N	

BXW/BXR/BXL/BXH Models

Selection Example 2

Holding Brakes Used in Ball Screw Drive of Loads



Selection of a brake to brake the load is as follows, as the above figure illustrates.

Motor (brake shaft) rotation speed	n	1800 [min-1]
Load shaft rotation speed	nı	900 [min ⁻¹]
Moment of inertia of motor	ML	0.001 [kg·m ²]
Mass of load	М	500 [kg]
Lead of feed screw	Р	0.01 [m]
Shaft diameter of feed screw	D	0.05 [m]
Length of feed screw	1	1 [m]
Friction coefficient of feed screw	μ	0.2

Consideration of Torque

The torque required for holding is calculated from the specifications at left, compared to the static friction torque in the catalog, and the appropriate brake size is selected.

• Calculating load torque converted to brake shaft load torque T ℓ Use the following equation to calculate the load torque T ℓ [N•m]. Here, there is no external force F [N•m], gravitational acceleration g [m/s²] is 9.8 [m/s²], R is the ratio of motor rotation speed to load shaft rotation speed, and η is transmission efficiency, which in this selection is 0.85.

$T \ell = R \times 1/2\pi \times P \times (F + \mu M_g)/\eta [N \cdot m]$

$T_{\ell} = (900/1800) \times 1/2\pi \times 0.01 \times (0 + 0.2 \times 500 \times 9.8)/0.85$

≒0.92[N•m]

- Calculating the required holding torque T
- Use the following equation to calculate the required holding torque T. Here, safety factor K is 2.

$T=T_{\ell} \times K[N \cdot m]$ $T=0.92 \times 2$

≒1.84[N•m]

Since the result of the above shows that required torque is 1.84 [N-m], check the specifications in the catalog and select size 06 (static friction torque of 4.0 [N-m]) of the BXH models of brakes for holding.

Consideration of Energy During Emergency Braking

Brakes selected based on required holding torque are designed primarily for holding, so their braking operations are limited to emergency braking and the like. It is therefore necessary to check that the braking energy per braking operation Eb during emergency braking does not exceed the allowable braking energy $\mathsf{E}_{\mathsf{ba}\,\ell}$.

· Calculating the moment of inertia of feed screws

Given a feed screw whose shaft has a length of 1 [m], diameter of 0.05 [m], and specific gravity of 7.8, the feed screw moment of inertia JA [kg•m²] is:

$$J_{A} = \frac{1}{8} \times M \times D^{2}$$

= $\frac{1}{8} \times (0.025^{2} \times \pi \times 1 \times 7.8 \times 1000) \times 0.05^{2}$

\Rightarrow 0.0048[kg · m²]

· Calculating the moment of inertia of a linearly moving object Use the following equation to calculate the moment of inertia Jx [kg•m²] of a linearly moving object.

$$J_{X}=J_{A}+\frac{M\cdot P^{2}}{4\pi^{2}}$$

=0.0048+ $\frac{500\times 0.01^{2}}{4\times \pi^{2}}$

- \Rightarrow 6.1×10⁻³[kg m²]
- · Calculating the total inertial moment converted to brake shaft inertial moment

The moment of inertia Jx [kg•m²] of a linearly moving object found above is added to the moment of inertia of the rotating parts of the provisionally selected BXH-06 (catalog value of 3.25 \times 10 $^{-\,\text{5}}$ kg·m²) and the motor's moment of inertia JM [kg·m²] to calculate the total moment of inertia. Here, R represents the ratio of the motor rotation speed to the load shaft rotation speed.

$$J=J_x \times R^2 + J_M + J_B[kg \cdot m^2]$$

=6.1×10⁻³×
$$(\frac{1}{2})^2$$
 +0.001+3.25×10⁻⁵
=2.56×10⁻³[kg • m²]

Consideration of energy

We calculate the braking energy per braking Eb required for emergency braking using the following equation. Here, the brake torque T_b [N•m] is the catalog value of 4.0 [N•m] and the sign of the load torque T_ℓ is plus, since it works in the direction that assists braking.

$$E_{b} = \frac{J \cdot n^{2}}{182} \times \frac{T_{b}}{T_{b} + T_{\ell}}$$

$$E_{b} = \frac{2.56 \times 10^{-3} \times 1800^{2}}{182} + \frac{4.0}{4.0 + 0.92}$$

⇒37.1[J]

Since the calculated braking energy Eb does not exceed the BXH-06's allowable braking energy Ebal (catalog value of 700 [J]), the specification is satisfied.

37.1 [J] < 700 [J]

Consideration of Number of Operations

The total number of braking operations (service life) L when doing emergency braking can be found using the following equation. Here, the BXH-06's total braking energy E_{T} is the catalog value of 2.0 \times 10⁶ [J].



≒ 53908 [times]

With these specifications, BXH-06 can be selected.

Note that the frequency of emergency braking has a major impact on service life, so it should be about once per minute or better.



SERIES



BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS


MODELS	
BXW	
BXR	
BXL	
вхн	
BXL-N	



BXW/BXR/BXL/BXH Models

Operating Characteristics

Operating Time

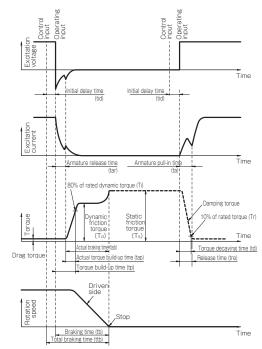

BXW Models Unit [
Туре	Voltage	Size	Switching	tar	ta
	12V	01		0.015	0.008
	24V	02		0.015	0.008
L type (Braking use)	45V	03	DC side	0.025	0.025
(Braking use)	90V	04		0.030	0.030
	180V	05		0.035	0.035
	12V	01	DC side	0.010	0.010
H type	24V	02		0.010	0.010
(Holding and	45V	03		0.020	0.035
braking use)	90V	04		0.025	0.040
	180V	05		0.030	0.045
		01		0.010	0.025
	24V	02	DC side	0.010	0.030
S type (Holding use)		03		0.020	0.035
(Holding use)		04		0.025	0.040
		05		0.030	0.045
R type		01		0.020	0.035
(For servo	24V	03	DC side	0.020	0.050
motors)		05		0.020	0.060

BXR LE Models (Holding use)

BXR LE Models (Holding use) Unit [s]					
Voltage	Size	Switching	tar	ta	
	015	DC side	0.020	0.020	
	020		0.020	0.035	
24V	025		0.020	0.035	
244	035		0.020	0.050	
	040		0.020	0.060	
	050		0.020	0.060	

BXR Models (Holding use)

BXR Models (Holding use)					
Voltage	Size	Switching	tar	ta	
	06	DC side	0.02	0.05	
	08		0.02	0.08	
24V	10		0.05	0.11	
241	12		0.03	0.12	
	14		0.03	0.12	
	16		0.10	0.22	

Unit [s]

BXL Models (Braking use)

Voltage	Size	Switching	tar	tap	tp	ta
5	06		0.020	0.015	0.035	0.035
24V	08		0.020	0.015	0.035	0.040
45V	10	DC side	0.025	0.020	0.045	0.050
90V	12		0.030	0.025	0.055	0.070
	16		0.035	0.030	0.065	0.100
	06		0.110	0.035	0.145	0.035
	08		0.110	0.040	0.150	0.040
45V 10 A 90V 12 16	AC side	0.150	0.060	0.210	0.050	
	12		0.180	0.095	0.275	0.070
		0.180	0.100	0.280	0.100	

BXH Models (Holding use)

BXH Models (Holding use) Unit				
Voltage	Size	Switching	tar	ta
	06		0.020	0.040
24V	08		0.020	0.045
45V	10	DC side	0.025	0.070
90V	12		0.025	0.090
	16		0.030	0.125
	06		0.070	0.040
	08		0.080	0.045
45V 90V	10	AC side	0.090	0.070
701	12		0.120	0.090
	16		0.140	0.125

BXL-N Models (Braking use)

BXL-N Models (Braking use) Unit [s]				
Voltage	Size	Switching	tar	ta
	08-10N-002		0.050	0.030
	08-10N-004	DC side	0.040	0.040
	10-10N-008		0.050	0.050
24V	10-10N-015		0.030	0.070
99V	12-10N-022		0.060	0.080
171V	12-10N-030		0.030	0.100
	16-10N-040		0.070	0.100
	16-10N-060		0.050	0.100
	16-10N-080		0.030	0.100

tar: Armature release time

The time from when current shuts off until the armature returns to its position prior to being pulled in and torque begins to be generated

tap: Actual torque build-up time

The time from when torque first begins to be generated until it reaches 80% of rated torque

tp: Torque build-up time

The time from when current flow is shut off until torque reaches 80% of rated torque

ta: Armature pull-in time

The time from when current flow first starts until the armature is pulled in and torque disappears

tid: Initial delay time


The time from start of command input to actuation input or release input to the main brake body

Control Circuits

45 V, 90 V, and 96 V Specifications for BXW, BXR, BXL, and BXH Models (Single-phase Half-wave Rectified)


AC-side Switching

This is the usual switching method. Connection is simple.



12 V and 24 V Specifications for BXW, BXR, BXL, and BXH Models (Single-phase Full-wave Rectified)

DC-side Switching



Circuit Protectors

If using a power supply that is not equipped with a circuit protector for DC switching, make sure to connect the recommended circuit protector device in parallel with the brake. However, with some circuit protectors, operation times may lengthen. In such cases, we recommend use of varistors.

Select varistors from the following table based on brake size and AC voltage before rectification.


Note that the 24 V specifications of BXL and BXH as well as all BXR models are supplied with varistors. See Included varistors for each model.

Brake size	Pre-rectification voltage [V]	Recommended varistor model
	AC 30 or below	NVD07SCD082 or an equivalent
01 ~ 18	Over AC 30 to AC 110 or below	NVD07SCD220 or an equivalent
01~18	Over AC 110 to AC 220 or below	NVD07SCD470 or an equivalent
	Over AC 220 to AC 460 or below	NVD14SCD820 or an equivalent
	AC 30 or below	NVD14SCD082 or an equivalent
00 - 05	Over AC 30 to AC 110 or below	NVD14SCD220 or an equivalent
20~25	Over AC 110 to AC 220 or below	NVD14SCD470 or an equivalent
	Over AC 220 to AC 460 or below	NVD14SCD820 or an equivalent


* NVD \Box SCD \Box parts are manufactured by KOA Corporation.

DC-side Switching

This method achieves even faster operational characteristics than AC-side switching.



- 90 V, 96 V, 180 V, and 190 V Specifications for BXW Models (Single-phase Full-wave Rectified)
- DC-side Switching





ELECTROMAGNETIC-ACTUATED MICRO CLUTCHES & BRAKES ELECTROMAGNETIC-ACTUATED CLUTCHES & BRAKES ELECTROMAGNETIC CLUTCH & BRAKE UNITS SPRING-ACTUATED BRAKE

ELECTROMAGNETIC TOOTH CLUTCHES

BRAKE MOTORS

MODELS	
BXW	
BXR	
BXL	
вхн	
BXL-N	